



Schita montaj : Dulap 70 - 2U +3S

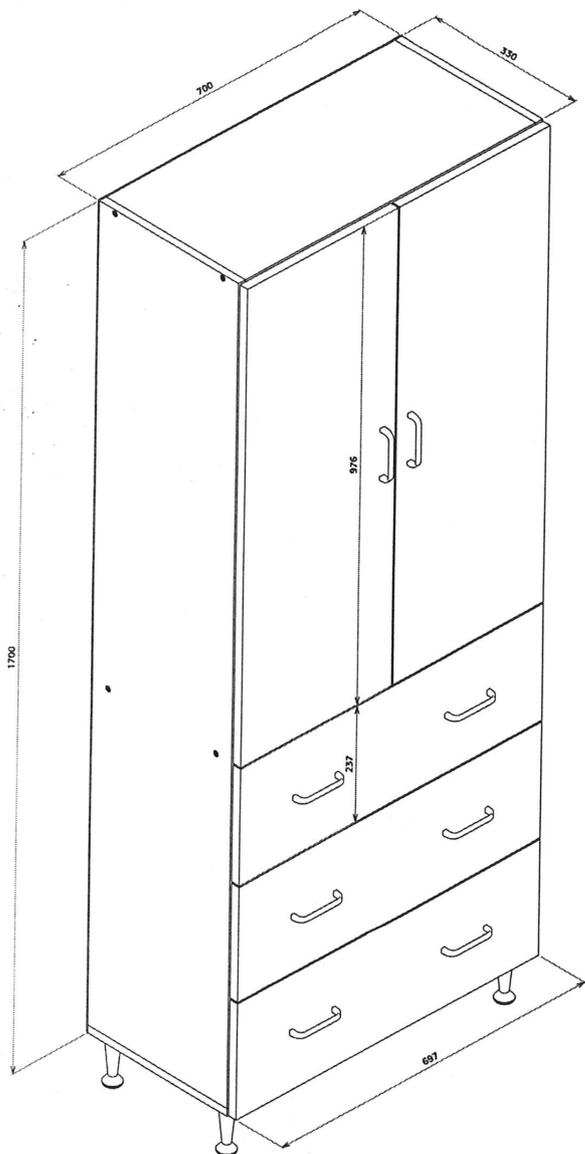


REPER	LUNGIME	LATIME	NB.
. PFL Sertar	643	300	3
. PFL Spate	976	348	2
. PFL Spate	721	348	2
Adaos sertar	611	138	6
Fata sertar	237	697	3
Laterala sertar	300	138	6
Perete lateral	1684	330	2
Polita fixa	668	330	2
Polita mobila	668	320	2
Soclu	700	330	1
Usa	976	347	2


ACCESORII	NB.
x - Balama Aplicata	6
x - Glisiera bila 300mm	3
x - Holzsurub 3.5x16	54
x - Holzsurub 3.5x25	6
x - Maner 96mm	8
x - Picioar H100	4
x - Profil imbinare PFL L=698mm	1
x - Profil imbinare PFL L=954mm	1
x - Suport polita (diblu zinc)	8
x - Surub confirmare (ericson 7x50)	36
x - Surub maner M4x20	4
x - Surub maner M4x35	12
x - Tinte	98



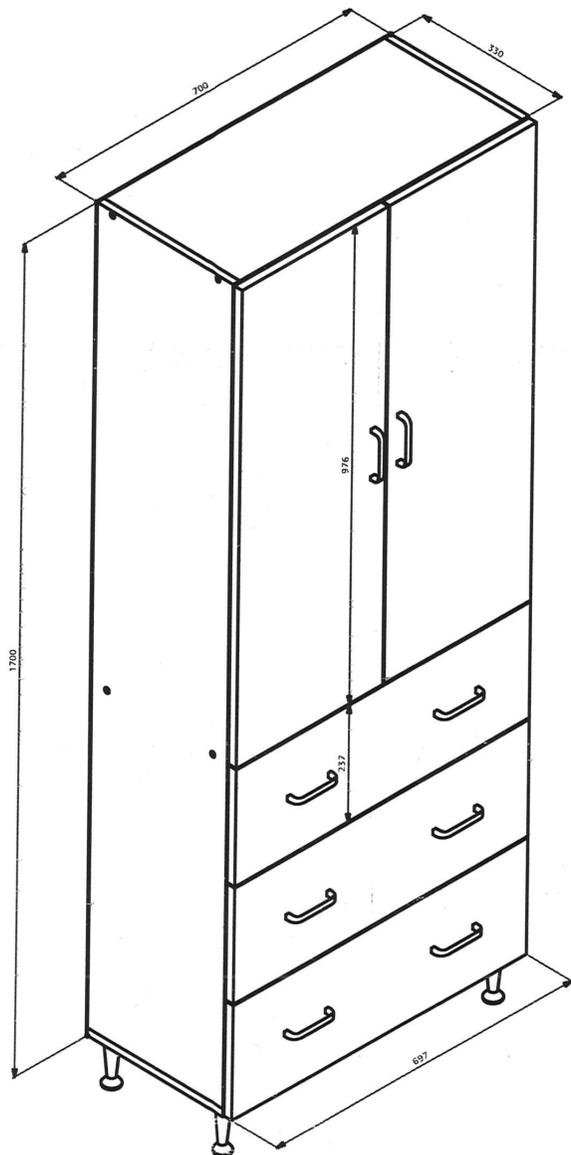



REPER	LUNGIME	LATIME	NB.
. PFL Sertar	643	300	3
. PFL Spate	976	348	2
. PFL Spate	721	348	2
Adaos sertar	611	138	6
Fata sertar	237	697	3
Laterală sertar	300	138	6
Perete lateral	1684	330	2
Polita fixa	668	330	2
Polita mobila	668	320	2
Soclu	700	330	1
Usa	976	347	2

ACCESORII	NB.
x - Balama Aplicata	6
x - Glisiera bila 300mm	3
x - Holzsurub 3.5x16	64
x - Holzsurub 3.5x25	6
x - Maner 96mm	8
x - Picior H100	4
x - Profil imbinare PFL L=698mm	1
x - Profil imbinare PFL L=954mm	1
x - Suport polita (diblu zinc)	8
x - Surub confirmare (ericson 7x50)	36
x - Surub maner M4x20	4
x - Surub maner M4x35	12
x - Tinte	98

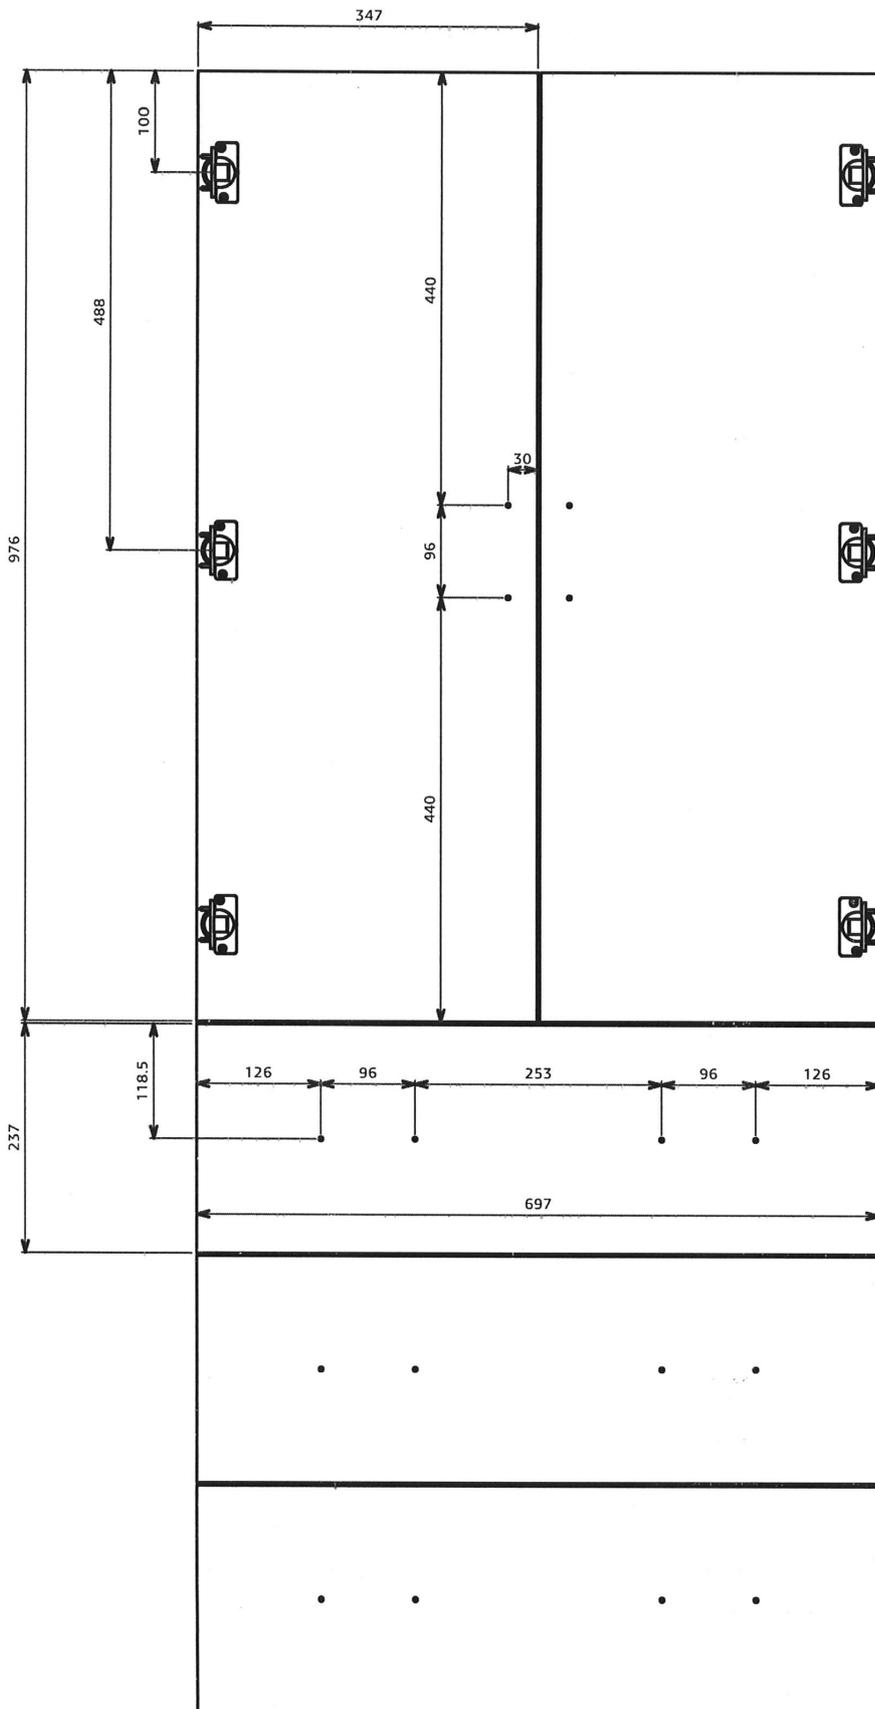


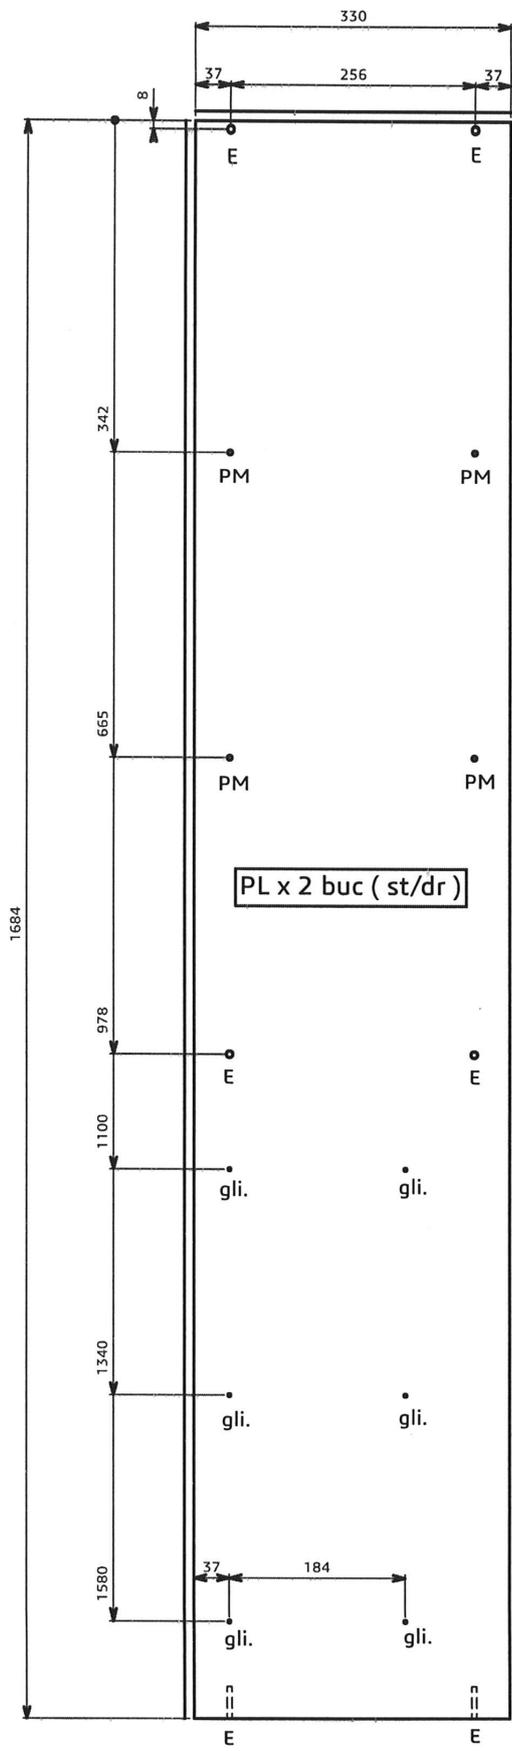

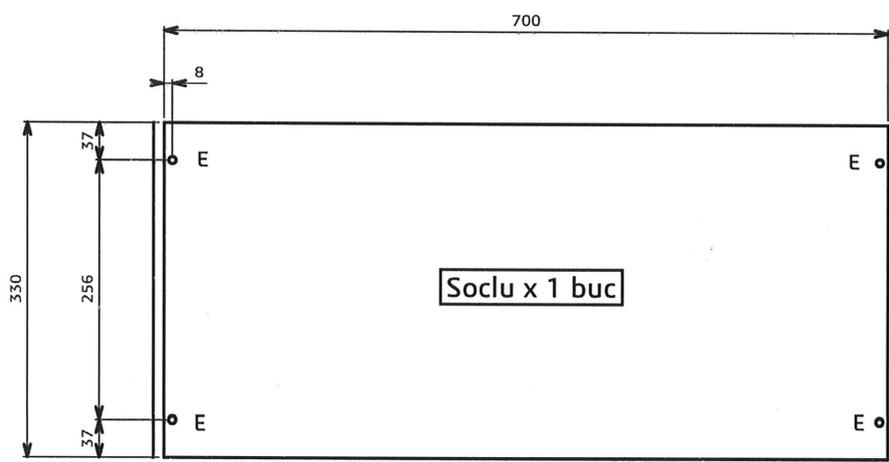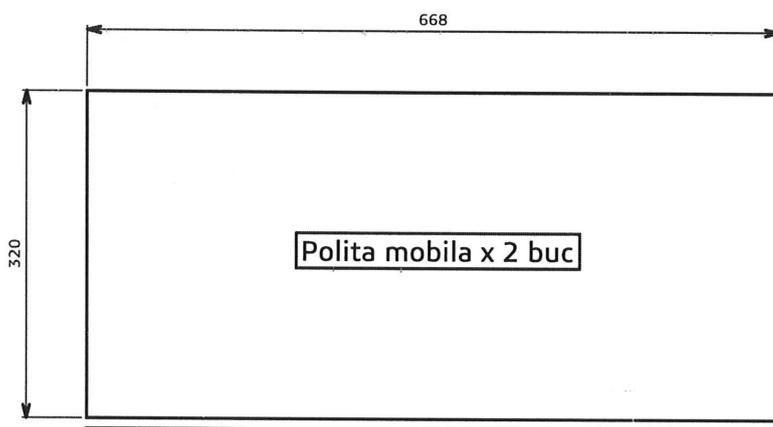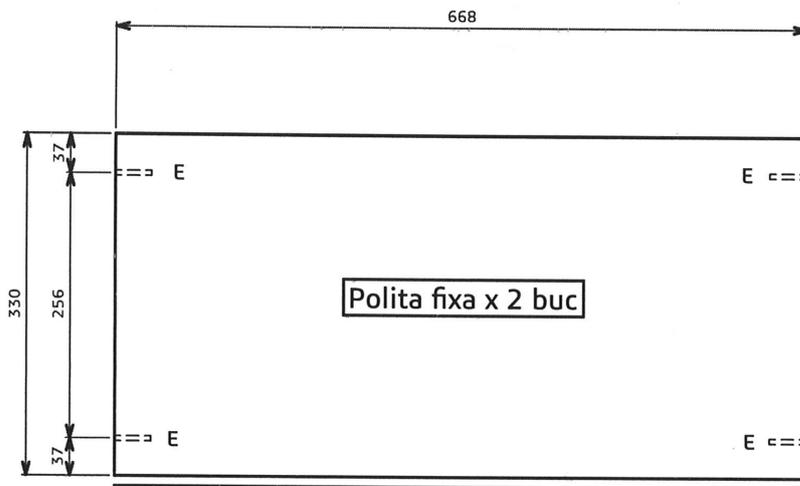

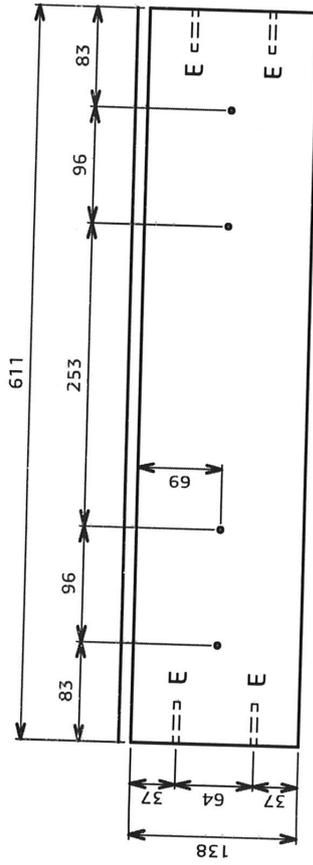

Adaos sertain
3 + 3buc

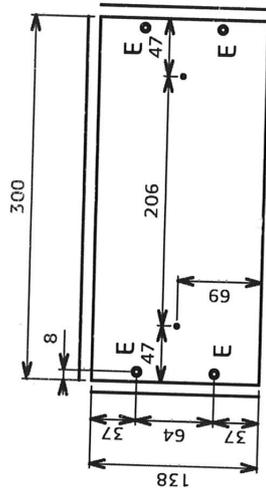

Lateralasertar
x 6buc